



## CC200 PROJECTOR

EN

Congratulations and we thank you for choosing HP CC200 projector.

CC200, is your perfect companion to enjoy content wherever life takes you.

### Package Contents

- HP CC200 \* 1


### <Accessories>

- Power Adapter \* 1
- Power Cord \* 1
- Remote Control \* 1
- AAA Battery \* 2 (For Remote Control)
- Quick Start Guide \* 1
- Warranty Card \* 1
- Product Notice \* 1

### Remote Control



### Product I/F

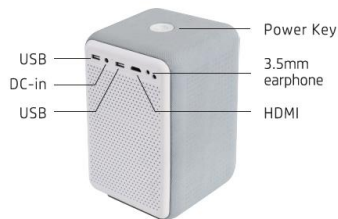

### USAGE TIPS

#### 1. Power On / Off

**Power On:** Press and hold the power button for 1 second, either on the top side of the projector or on the remote control.

**Power Off:** Press and hold the power button for 1 second, either on the top side of the projector or on the remote control. CC200 will display the power off prompt, followed by shut down.

#### 2. Focus Adjustment

To ensure a clear and sharp display, please adjust the focus of the projector before use. By pressing the **Focus [ + ]** and **Focus [ - ]** buttons on the remote control, it will allow for precise adjustment of the display focus according to your preferences.

Please be kindly reminded that the optimal viewing distance of CC200, is between 1 and 3 meters (~3-9 ft) from the projector to the display surface.

#### 3. Plug and Play

You can connect CC200 through the HDMI input interface to project your content from an external video source (mobile, tablet, laptop, PC etc.). You can also directly display images or video located in the internal memory or any external storage via USB.

**Enjoy your CC200!**

## HP CC200

### Návod na používanie

Blahoželáme a ďakujeme, že ste si vybrali projektor HP CC200.

HP CC200 je vašim dokonalým spoločníkom, aby ste si mohli užívať obsah, či už vás život zavedie kamkoľvek.

### Obsah balenia

HP CC200 \* 1


<Príslušenstvo>

- Napájací adaptér \* 1
- Napájací kabel \* 1
- Dialkový ovládač \* 1
- AAA batérie \* 2 (pro dialkový ovládač)
- Návod na používanie \* 1
- Záručný list \*1
- Technické informácie \* 1

### Dialkový ovládač



## Produkt I/F

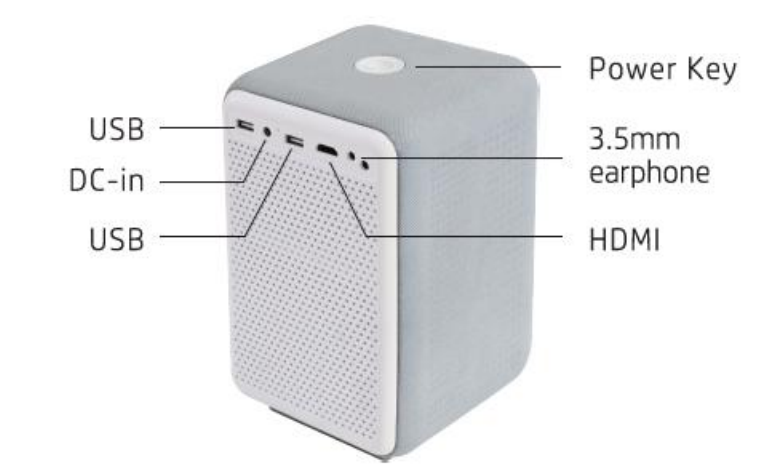

### Tipy pre použitie

#### 1. Zapnutie/Vypnutie

**Zapnutie:** Stlačte a podržte tlačitko napájania po dobu 1 sekundy, a to buď na hornej strane projektora, alebo na diaľkovom ovládači.

**Vypnutie:** Stlačte a podržte tlačitko napájania po dobu 1 sekundy, a to buď na hornej strane projektora, alebo na diaľkovom ovládači. CC200 zobrazí výzvu na vypnutie a potom dojde k vypnutiu.

#### 2. Nastavenie zaostrenia

Aby ste zajistili jasný a ostrý obraz, pred použitím upravte zaostrenie projektora. Stlačením tlačítek Focus [+] a Focus [-] na diaľkovom ovládaní umožníte presné nastavenie zaostrenia displeja podľa vašich preferencií.

Pripomínáme, že optimálna vzdialenosť pre sledovanie CC200 je medzi 1 a 3 metre od projektora k povrchu displeja.

#### 3. Pripojenie

CC200 môžete pripojiť prostredníctvom vstupného rozhrania HDMI a premietiť tak svoj obsah z externého zdroja videa (mobil, tablet, notebook, počítač...). Prostredníctvom USB môžete tiež priamo zobraziť obrázky alebo videá umiestnená vo vnútornej pamati alebo externom úložisku.

Užite si váš CC200!